 


6931

LEGOLAND®

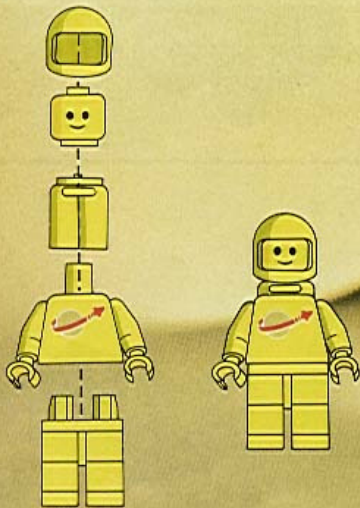

120367



 
1



2



3


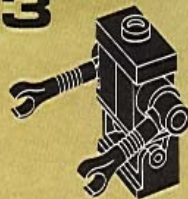



4



  
 
5



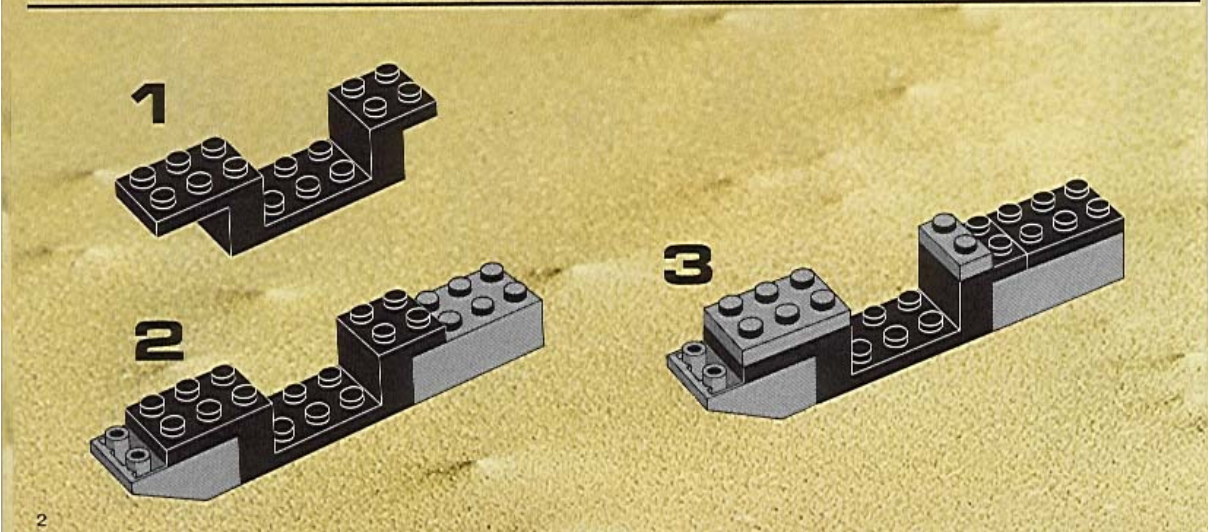
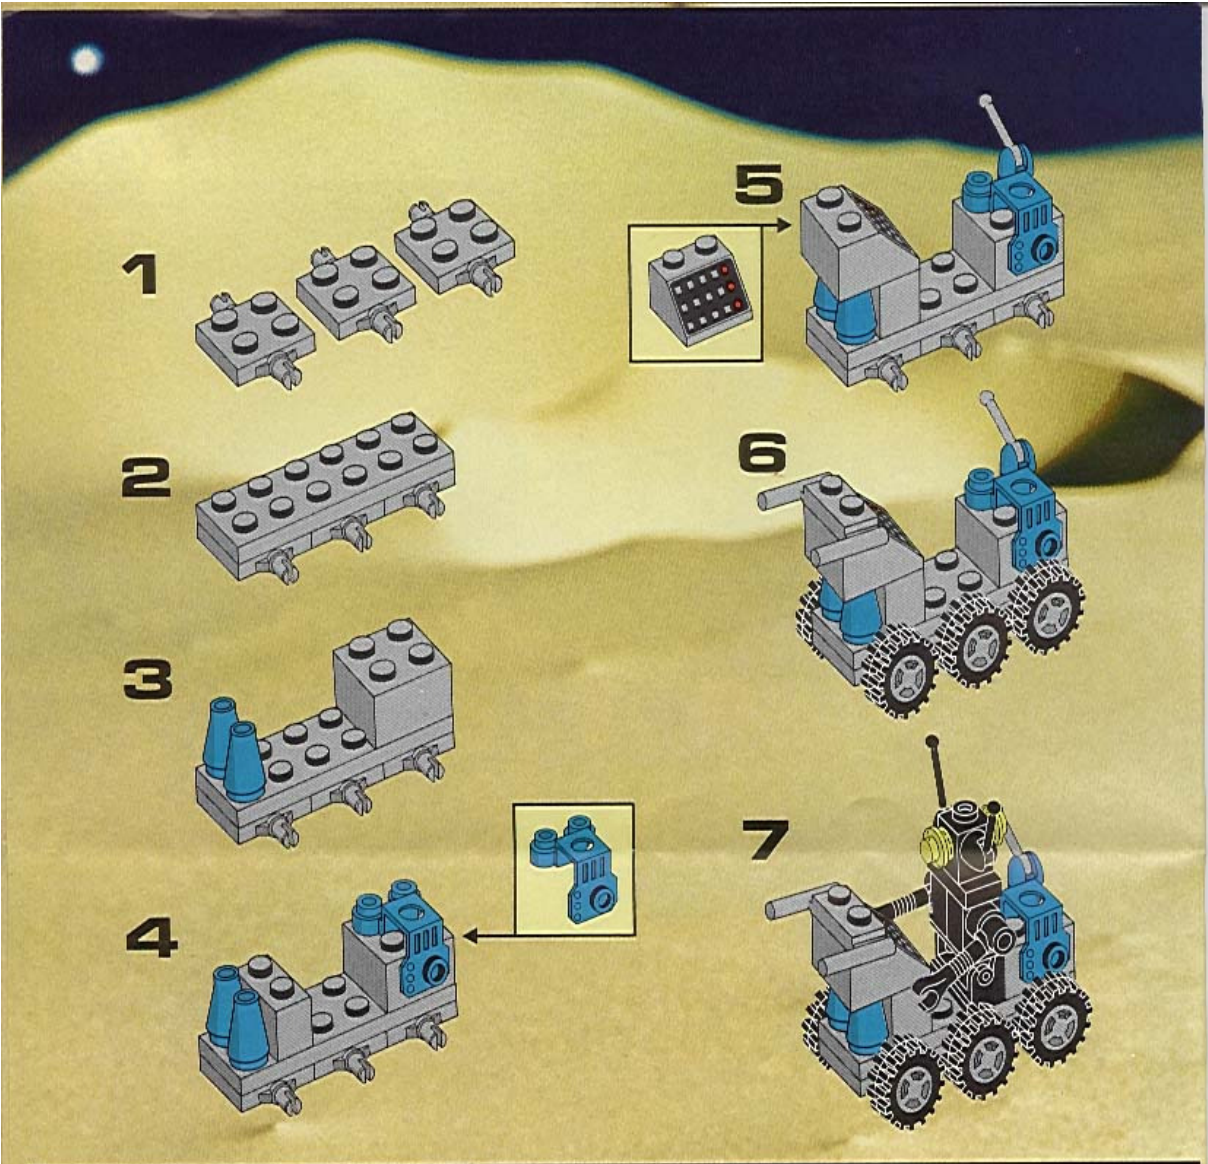


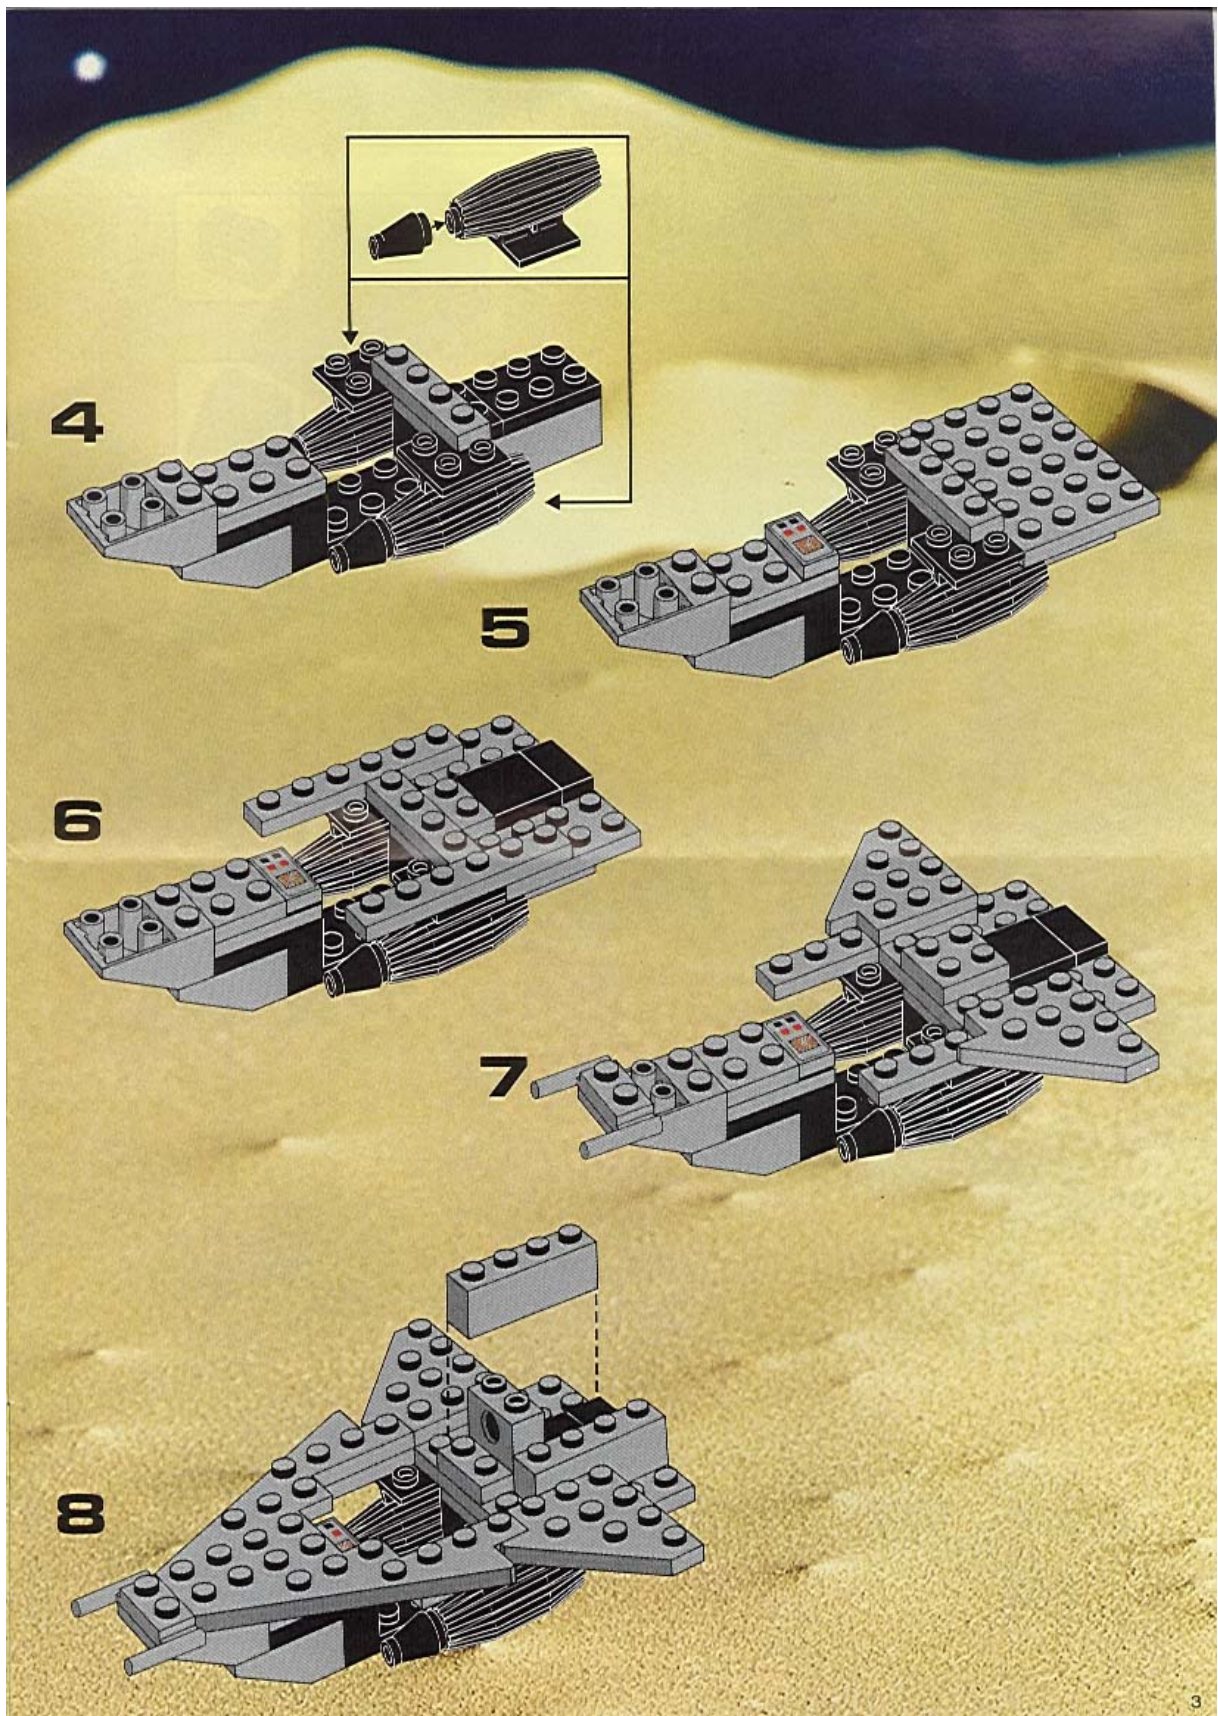



9

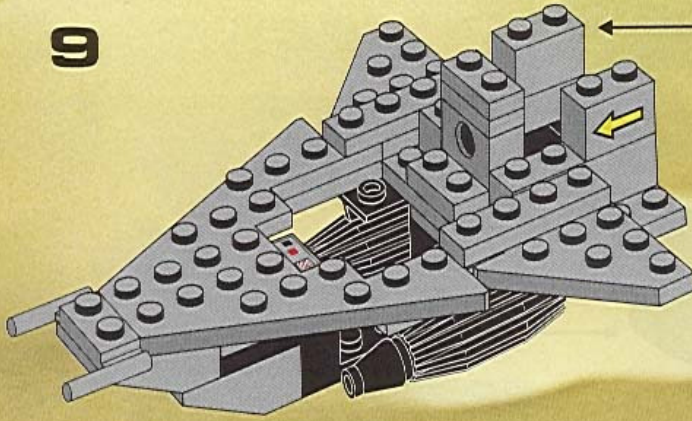  


10

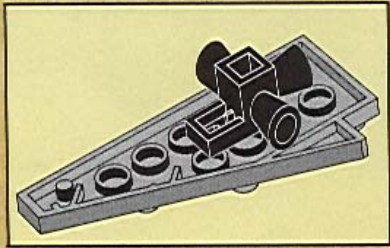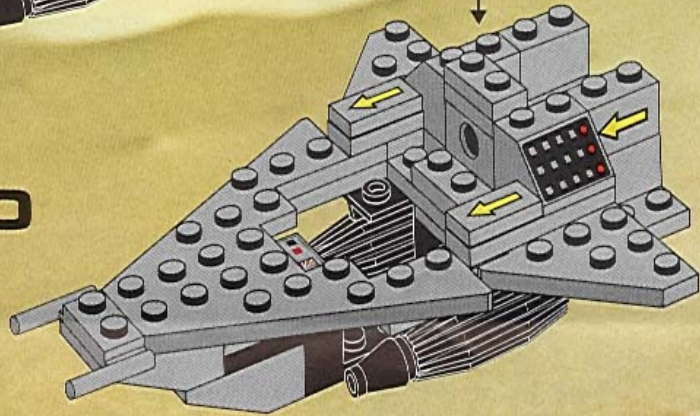  


11

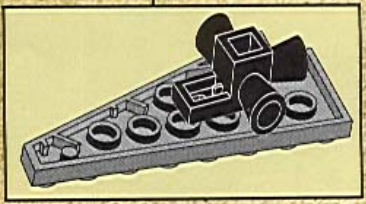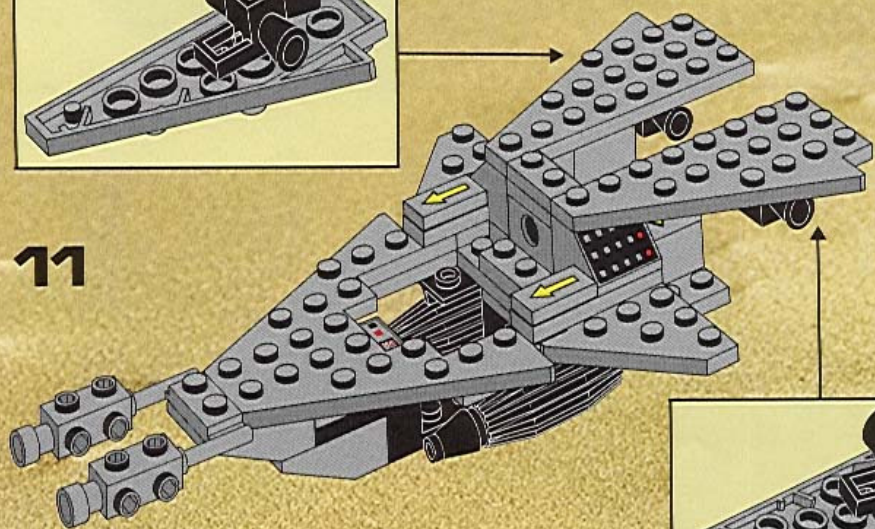  


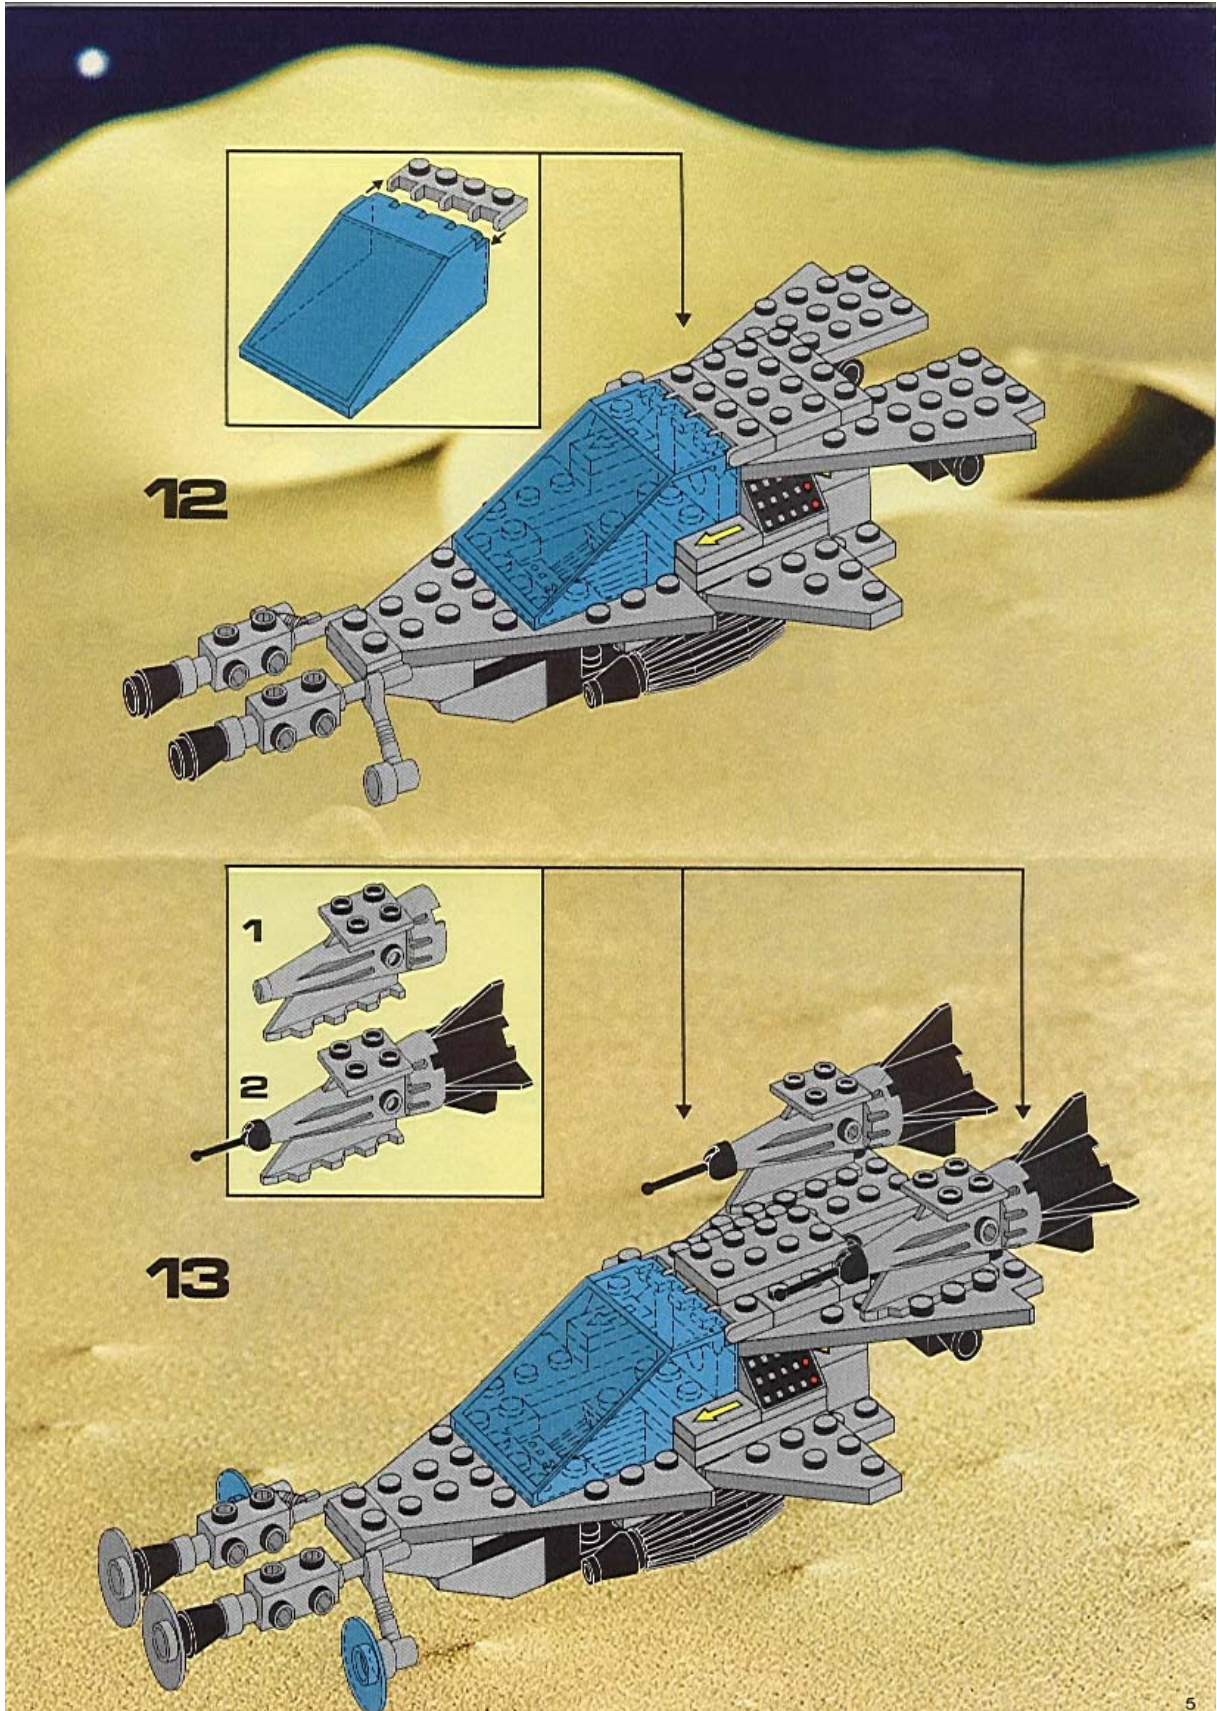 


14

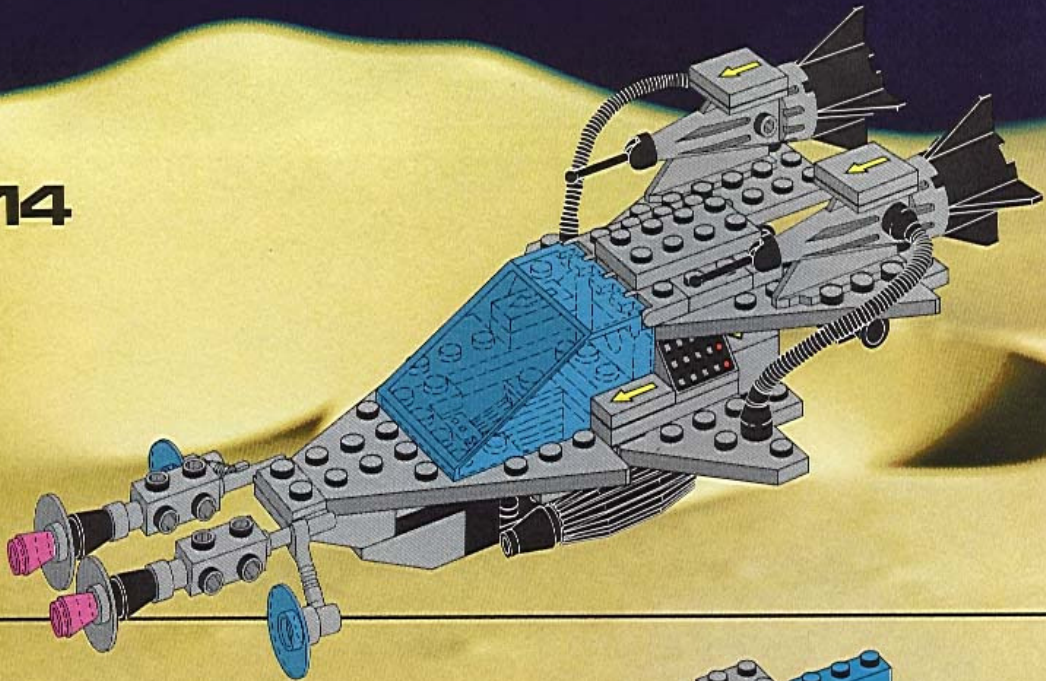 


1

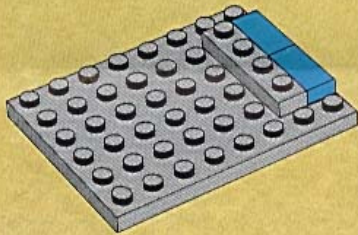 


2

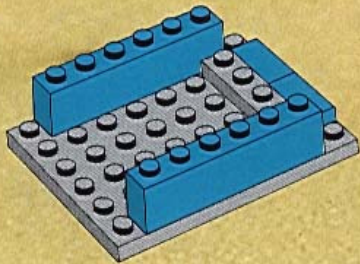 


3

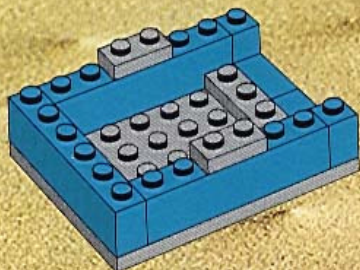 


4

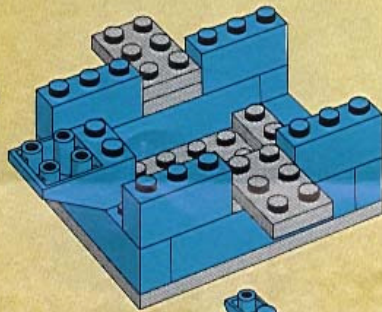 



5

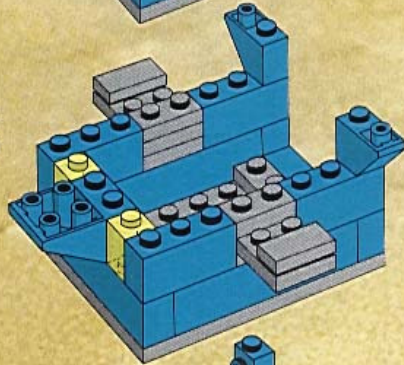 

6

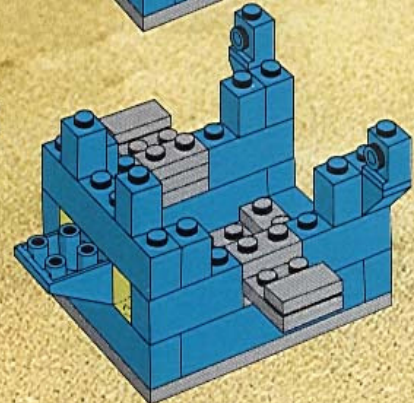 


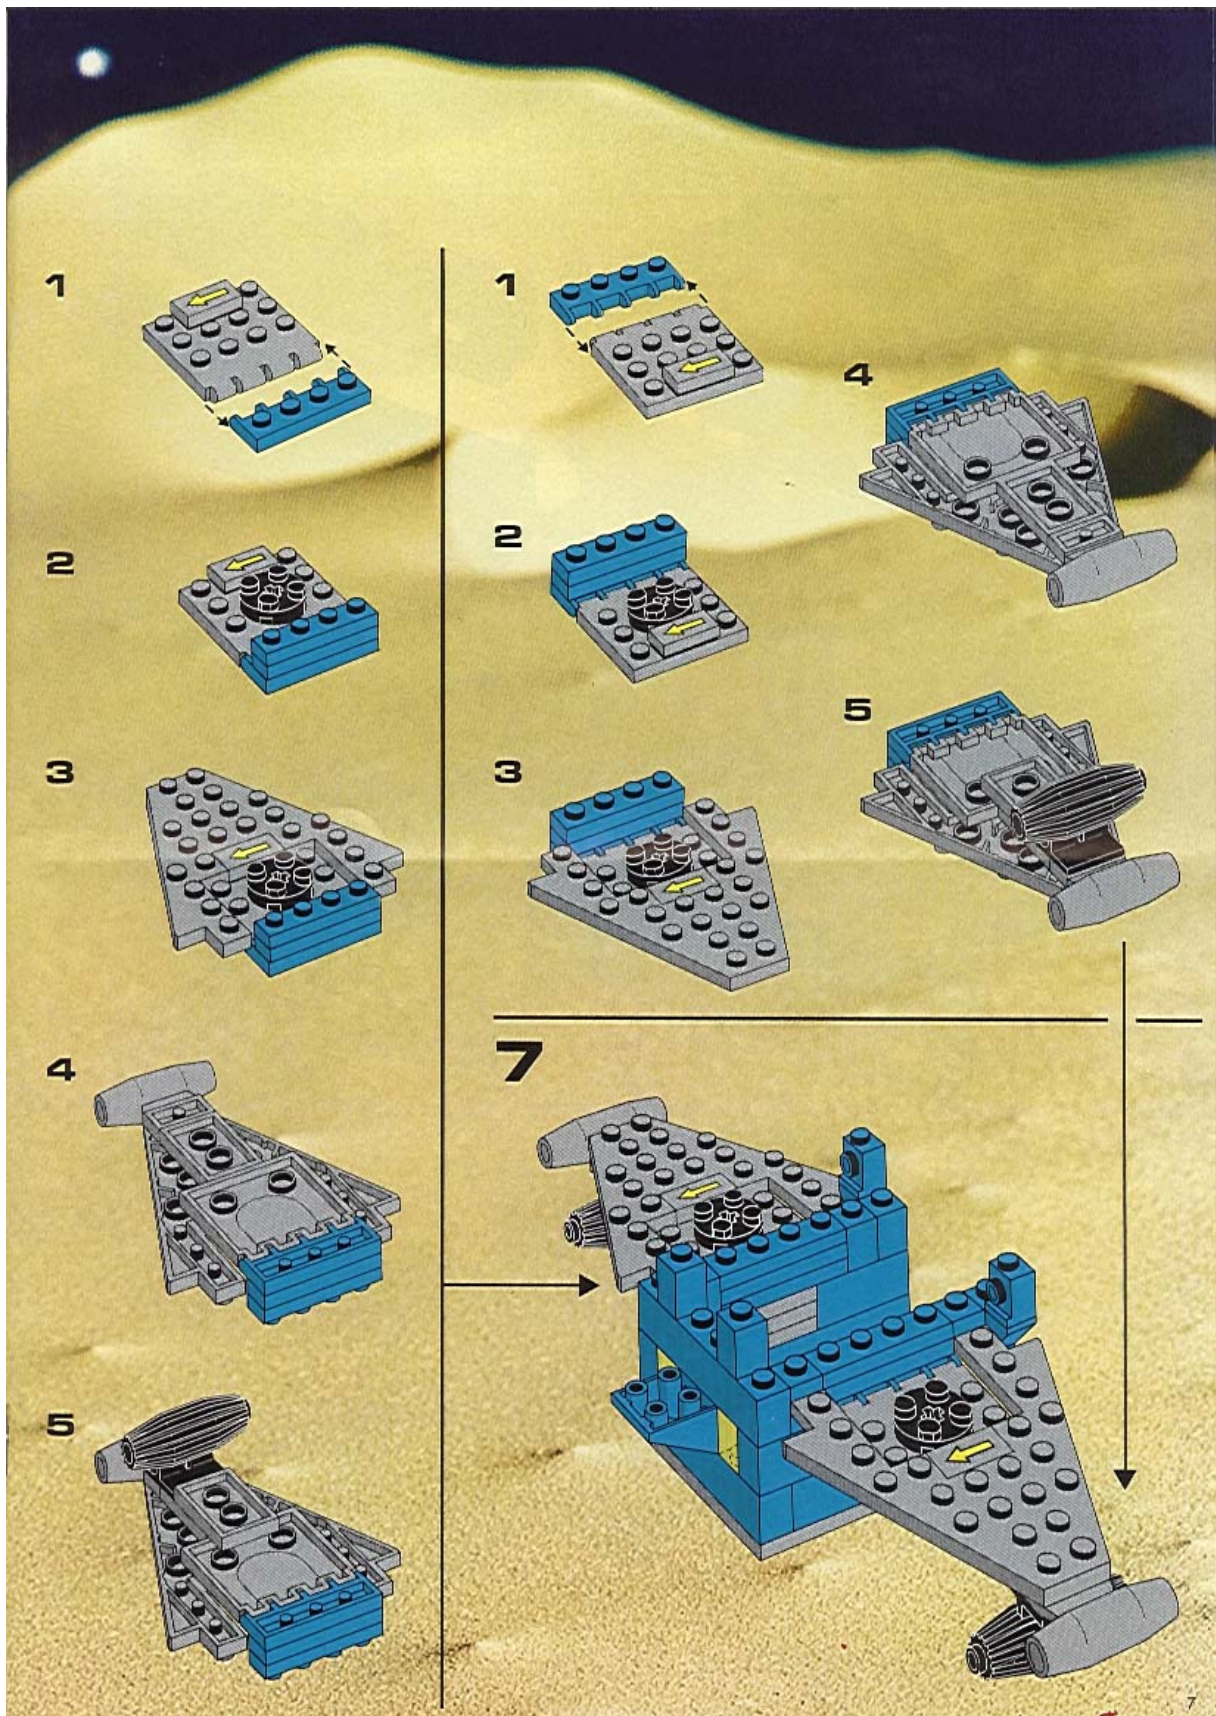 

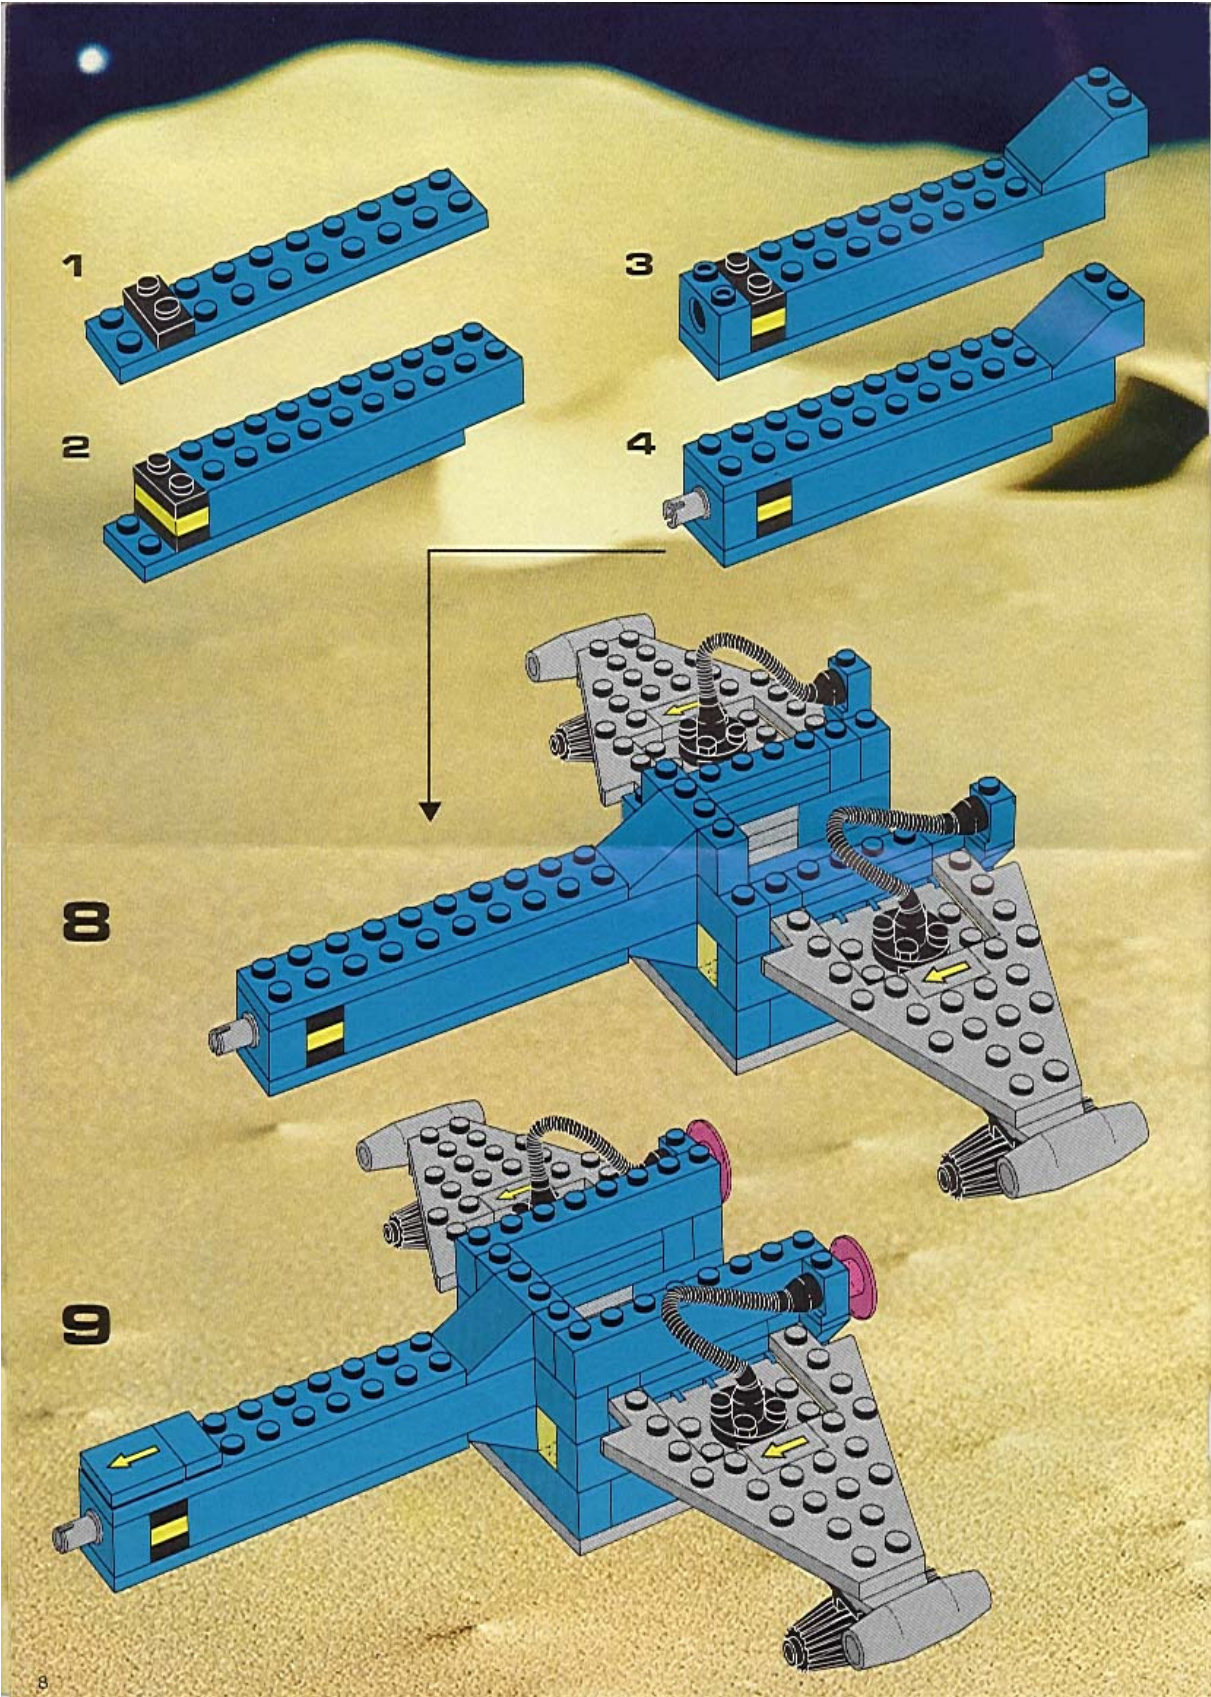 



10

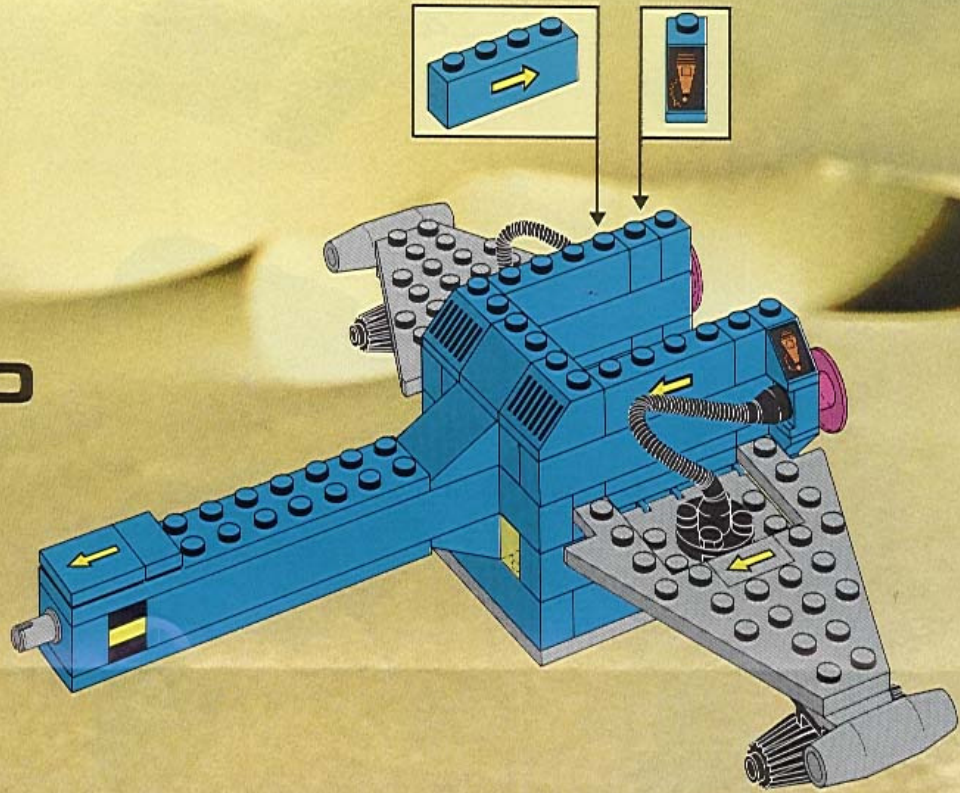 

11

